


# Bulb failure warning light system

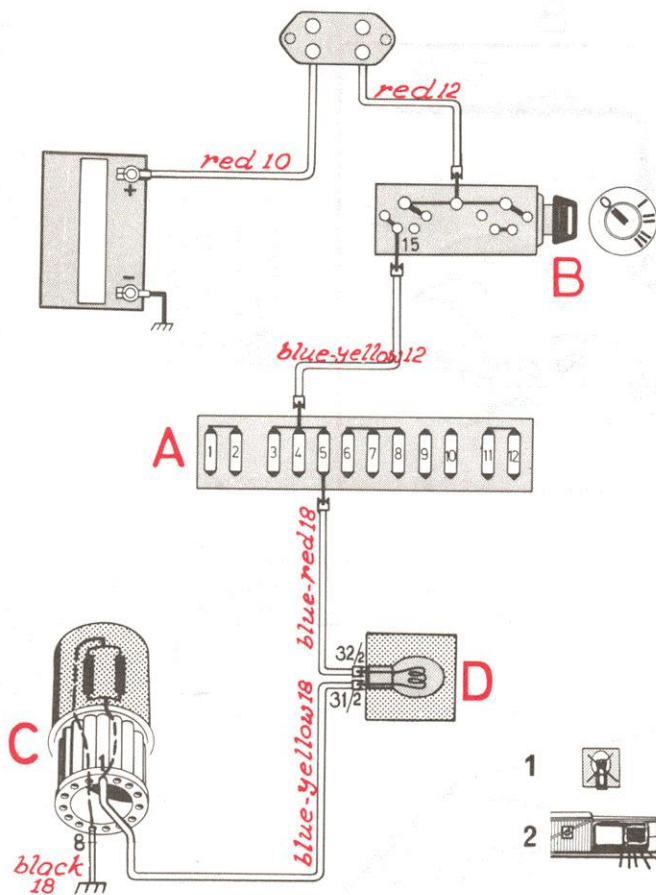



## Fuse No. 5

Instrument cluster  
Turn signals  
Relay, CI system  
Side mirrors

## Legend:

- A Fuse box
- B Ignition lock
- C Bulb failure sensor
- D Bulb failure warning light

## Bulb failure sensor activated (bulb out of order)

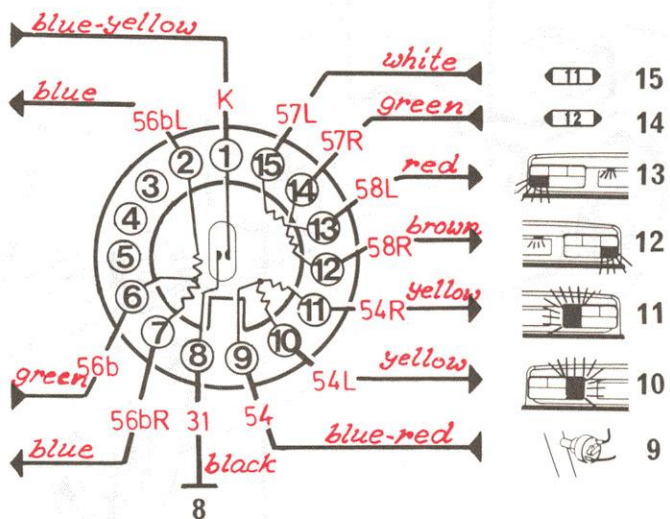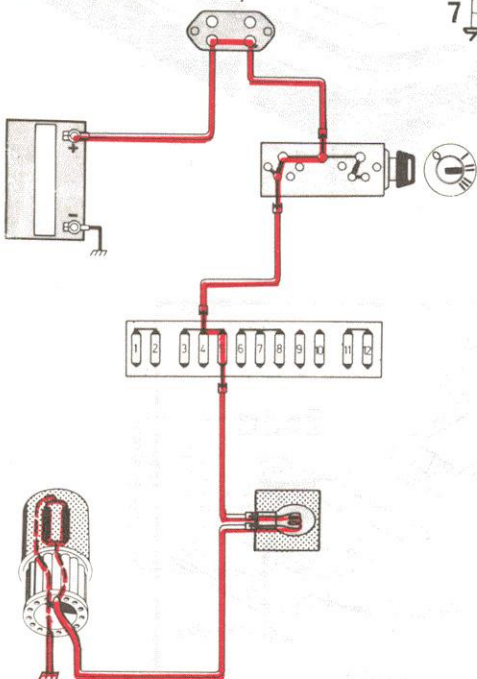

## Connections

- 1 Bulb failure warning light
- 2 Lower beam, left side
- 6 Lower beam connection on upper/lower beam switch relay
- 7 Lower beam, right side
- 8 Ground (for bulb failure warning light)
- 9 Brake light switch
- 10 Brake light, left side
- 11 Brake light, right side
- 12 Tail light, right side
- 262/264: license plate light, right side
- 13 Tail light, left side
- 262/264: license plate light, left side
- 14 Fuse No. 12
- 15 Fuse No. 11