


# Seat belt warning system

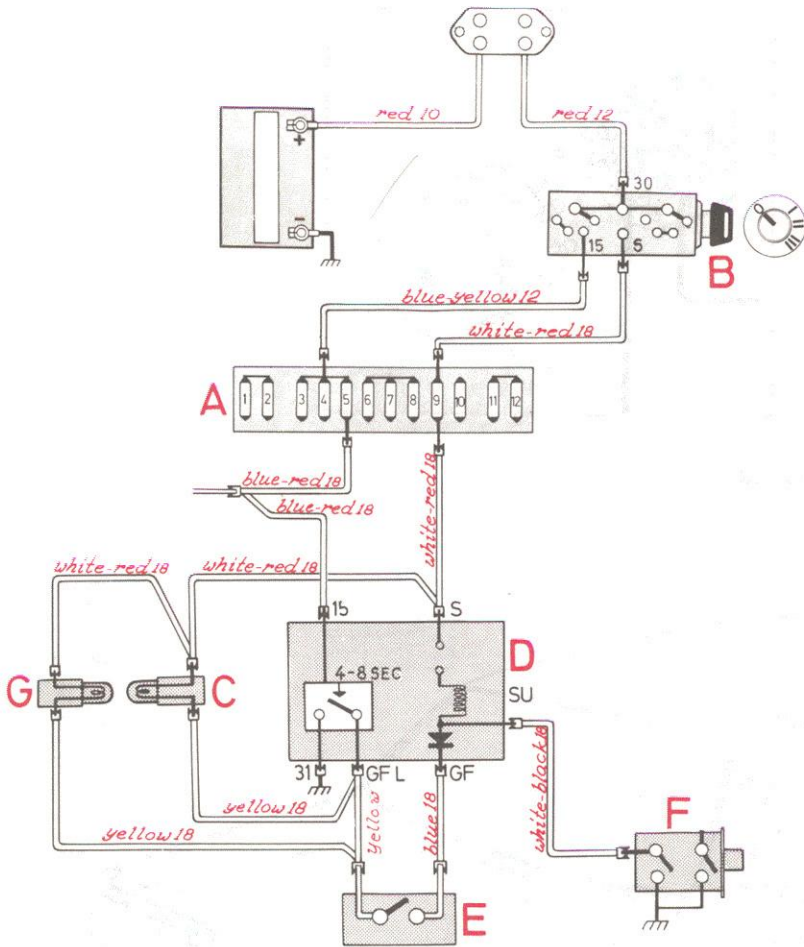

**Fuse No. 5**  
 Instrument cluster  
 Turn signals  
 Relay, CI system  
 Side mirrors

**Legend:**

- A Fuse box
- B Ignition lock
- C Seat belt indicator light, front
- D Flasher unit
- E Seat belt lock
- F Door switch
- G Seat belt indicator light, rear

**Seat belt buckled**  
 Ignition ON  
 Fasten seat belt light on  
 4-8 seconds  
 No buzzer

**Seat belt not buckled**  
 Ignition ON  
 Fasten seat belt light on  
 4-8 seconds  
 Buzzer ON 4-8 seconds

**Ignition key in ignition lock**  
 (any position)  
 Door open  
 Key warning buzzer sounds  
 as long as door is open

