


Electrically heated driver's seat

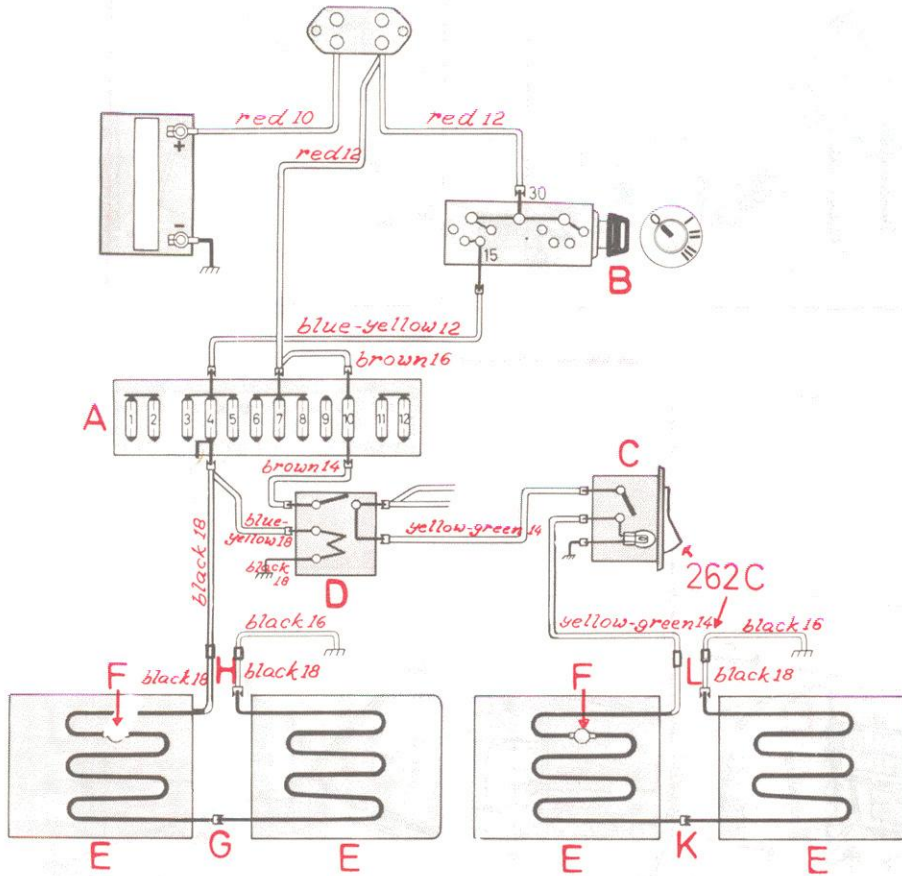

Fuse No. 4

- Back-up lights
- Air conditioning
- Heated driver's seat
- Relay, window lift

Fuse No. 10

- Window lifts
- Heated passenger's seat (262 C)

Legend:

- A Fuse box
- B Ignition lock
- C Switch, passenger seat heater
- D Relay, window lift and passenger seat heater
- E Heater pad
- F Thermostat
- G Connector
- H Connector
- K Connector
- L Connector

Seat heater ON

- ON at +14° C (60° F)
- OFF at +26° C (80° F)

