


Cruise control disengaged

If the brake pedal switch is engaged, the self-holding relay in the speed control will be dis-engaged (same voltage on both ends of the coil).

The memory retains the previous speed setting.

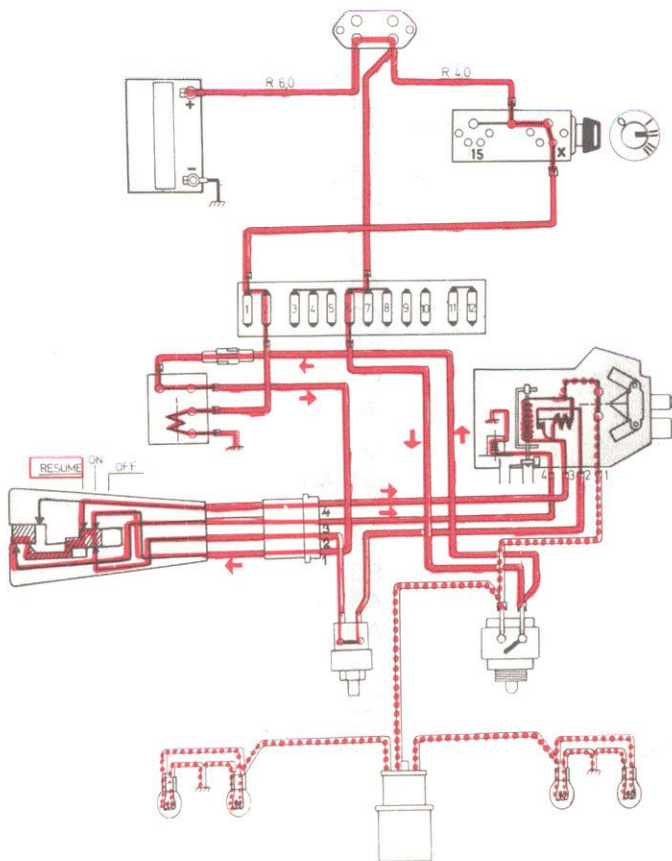

Resume

Dotted lines indicate voltage below 12 V.