


Fuses

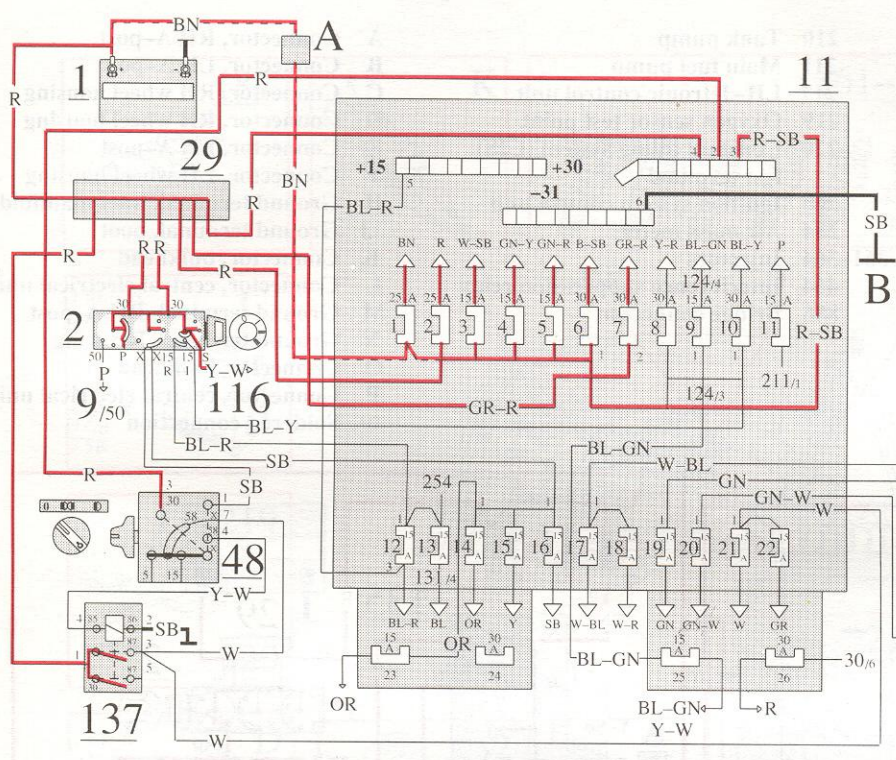

- 1 Battery
 - 2 Ignition switch
 - 9 Starter motor
 - 11 Fusebox
 - 29 Positive terminal strip
 - 48 Light switch
 - 116 Seat belt reminder (USA)
 - 137 Main lighting relay
- A Connector, LH A-post
 B Ground terminal, RH A-post

Main beam, from light switch
 LH dipped beam, from bulb failure warning sensor
 RH dipped beam, from bulb failure warning sensor

Fuse No.	Function(s)	Rating, A	Fuse No.	Function(s)	Rating, A
1	Main fuel pump	25	14	Power rear-view mirrors, cigarette lighter, radio, heater fan, air conditioning	15
2	Central locking, system, hazard warning lights, rear foglamps	25	15	Horn, windscreen wipers, windscreen washers	25
3	Dipped beams, rear foglamps	15	16	-	
4	Brake lights	15	17	LH main beam	15
5	Glove compartment lighting, clock, radio, engine compartment lighting, interior lighting, boot lighting, electric aerial, door courtesy lights, vanity mirror	15	18	RH main beam, supplementary main beam	15
6	Electrically-heated front seats	30	19	LH dipped beam	15
7	Electronic climate control (ECC)	30	20	RH dipped beam	15
8	Electric window winders	30	21	LH parking lights, front and rear, number plate light. Illumination of ashtray, heater controls, rear window heater switch, electric sunroof switch. Illumination of instruments and switches to left of steering wheel	15
9	Seat belt reminder, direction indicators, air conditioning, electrically-heated front seats, electric window winders	15	22	Illumination of seat belt locks. RH parking lights, front and rear. Illumination of storage pocket between front seats. Supplementary main beams.	15
10	Electrically-heated rear window, electrically-heated rear-view mirrors, electric sun roof	30	23	Relay, power seats	15
11	Fuel pump (tank pump), electrically-heated oxygen sensor (Lambdasond) (B 280 F)	15	24	Power passenger seat	30
12	Reversing lights, cruise control, ignition on, automatic transmission disengagement	15	25	Rear foglamps (USA/CDN)	15
13	Automatic idling controls	15	26	Power driver's seat	30

N.B. The system also includes a 10 A fuse for the ABS (anti-lock braking system) function. This is incorporated in the transient surge protector at the pedal mounting.