

# LH-Jetronic 2.2 (B 280 E/F)

- |   |  |                                      |
|---|--|--------------------------------------|
| 1 Battery                                   | 210 Tank pump                                  | A Connector, RH A-post               |
| 2 Ignition switch                           | 211 Main fuel pump                             | B Connector, LH A-post               |
| 3 Ignition coil                             | 217 LH-Jetronic control unit                   | C Connector, RH wheel housing        |
| 4 Positive terminal strip                   | 219 Oxygen sensor test point                   | D Connector, RH wheel housing        |
| 11/1-35 Fuses                               | 220 Constant idling system (CIS) test terminal | E Connector, LH A-post               |
| 29 Positive terminal strip                  | 260 Ignition system control unit               | F Connector, LH wheel housing        |
| 31 Ground busbar in central electrical unit | 284 Air mass meter                             | H Ground terminal, inlet manifold    |
| 84 Water temperature sensor                 | 361-364 Injectors                              | J Ground terminal, boot              |
| 135 Fuel injection relay                    | 464 Interference suppression relay             | K Connector, bulkhead                |
| 187 Oxygen sensor (Lambdasond)              | 886 Bridge connector                           | L Connector, central electrical unit |
| 196 Idling valve                            |  | M Ground terminal, RH A-post         |
| 198 Throttle switch                         |  | N Ground terminal, RH wing           |
| 202 Climate control                         |  | O Connector, bulkhead                |
|   |  | P Connector, central electrical unit |
|   |  | ○ Soldered connection                |

