

Supplemental Restraint System (SRS) (Air bag)

- | | | | |
|---------|--|---|--------------------------------|
| 1 | Battery | A | Connector, LH A-post |
| 2 | Ignition switch | B | Connector, LH wheel housing |
| 3/3 | 3-pin socket on combined instrument | C | Connector, relay board |
| 10 | Alternator | D | Connector, relay board |
| 11/1-26 | Fuses | E | Connector under steering wheel |
| 12/2 | 12-pin socket on combined instrument | F | Contact reel |
| 29 | Positive terminal strip | G | Ground terminal, relay board |
| 31 | Ground busbar in central electrical unit | | |
| 98 | SRS warning lamp | | |
| 513 | Ignition module, driver's seat | | |
| 514 | Ignition module, passenger seat | | |
| 928 | Crash sensor, including standby power unit (under driver's seat) | | |
| 929 | Steering wheel module | | |
| 931 | Safety circuit | | |
| 932 | Test socket | | |

