


Set speed

Switch position ON and SET SPEED button depressed.

The relay and the vacuum valve in the speed regulator are grounded through the brake light bulbs. The current is too small to illuminate the brake lights.

Dotted lines indicate voltage below 12 V.

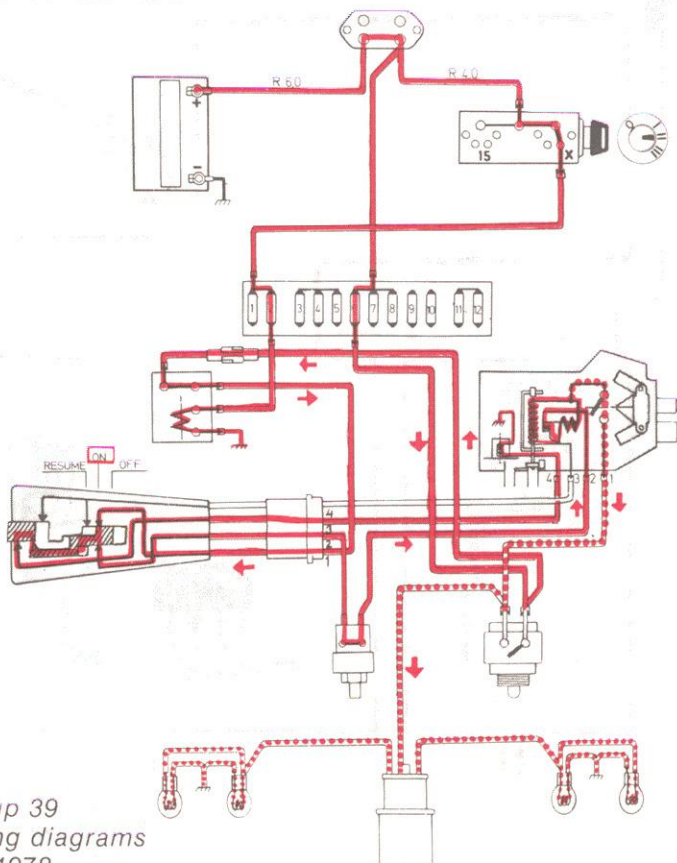

ON

The ON-impulse arrives at the speed control terminal 3. The speed control self-holding relay receives self-holding voltage through terminal 2 (provided speed is higher than 35 mph and brake and clutch not engaged).

Dotted lines indicate voltage below 12 V.